
#### Installation Instructions For:

# ST90CP10-70 ST90CB10-70

 
# ST90WH10-70

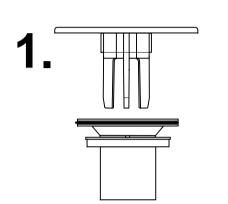

Flange


The Trap provides a flow rate of 34 litres per minute when tested in accordance with EN274-2:2002. The flow rate can be seriously impaired if an adequate fall is not maintained throughout the length of the waste pipe.

This product can be used with shower trays up to 26mm thick.




Install Trap into shower tray by assembling parts A, B, C, D & E as illustrated.

### **Shower Tray**

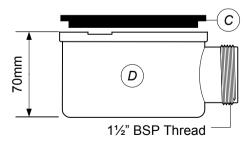

Connect Trap Outlet, E, to waste pipe, ensuring that the pipe is adequately supported. Test the installation.

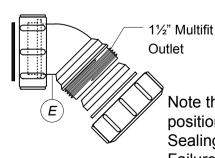


Note the order and position of the Sealing Washers. Failure to do so can result in water leakage.

## 90mm x 50mm WATER SEAL SHOWER TRAP




Assembly, F. Push down firmly to ensure Trap is in bottom position. Finally, insert Flange into Trap.

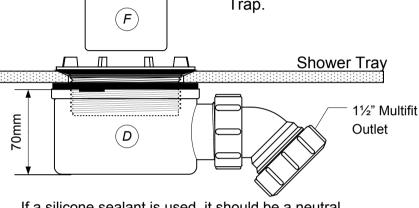

If a silicone sealant is used, it should be a neutral sealant and **not** an acetoxy sealant.

## 3. Completed Assembly

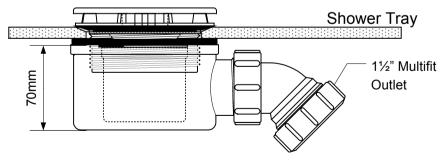

#### **After Care:**

Regular maintenance is essential to retain a high performance flow rate. Remove the Flange and Trap Assembly, *F*, and thoroughly clean all the parts. Flush through the Trap Body with clean water and carefully replace the parts.

(C)McALPINE 10/04/2009