Installation Instructions For:

85.00mm

85.00

adequately supported. Test the


85mm x 50mm WATER SEAL SHOWER TRAP

Plumbing Products



1 1/2" BSP

installation.




Mushroom Flange

The Trap provides a flow rate of 20 litres per minute when tested in accordance with EN274-2:2002. The flow rate can be seriously impaired if an adequate fall is not maintained throughout the length of the waste pipe.

Install Trap into shower tray by assembling parts *A*, *C*, *D* & *E* as illustrated.

Shower Tray

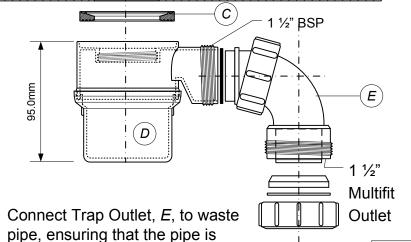


Insert Dip Tube, *F*, ensuring that it is pushed down fully . Finally, insert Mushroom Flange G, into Locknut.

Shower Tray

85.00mm

3 Completed Assembly

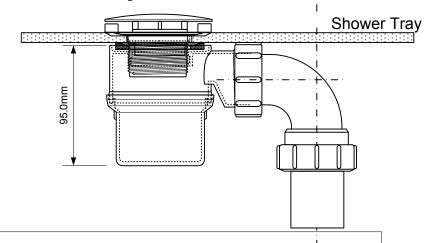

After Care:

Regular maintenance is essential to retain a high performance flow rate. Remove the

Mushroom Flange, G, and Dip Tube, F, and thoroughly clean all the parts. Flush through the Trap Body with clean water and carefully replace the parts.

CMcALPINE 10/04/2009