

**1 1/2" Shower Trap**  
**With Top Access**  
 Mushroom Flange

**Fixing Instructions**

1. Place Rubber Seal (4) in recess on top of Trap (5) and offer up this assembly to underside of Shower Tray.
2. Apply **NEUTRAL SILICONE SEALANT\*** (Dow Corning 794 or equivalent) between threaded Waste Flange (3) and Shower Tray.
3. Position Trap Outlet in desired position\*\* and screw Waste (3) into Trap (5).

**DO NOT OVERTIGHTEN, HAND TURN + 1/4 TURN IS SUFFICIENT.**

**DO NOT USE TRAP TO TIGHTEN ASSEMBLY.**

**DO NOT USE TRAP TO SUPPORT TRAY.**

4. Place Mushroom Flange (1) into Waste (3).
5. Test the Installation.

\* Only use a Neutral Silicone Sealant – other sealants can attack and damage the Trap and Waste


\*\* It is possible to fully fit the Trap to the Shower Tray before Tray is placed in final position



McAlpine & Co. Ltd  
 Kelvin Avenue, Hillington, Glasgow, G52 4LF  
 Tel: 0141 882 3213 Fax: 0141 891 5065

© McALPINE  
 February 2006

**RETAIN FOR HOUSEHOLDER**

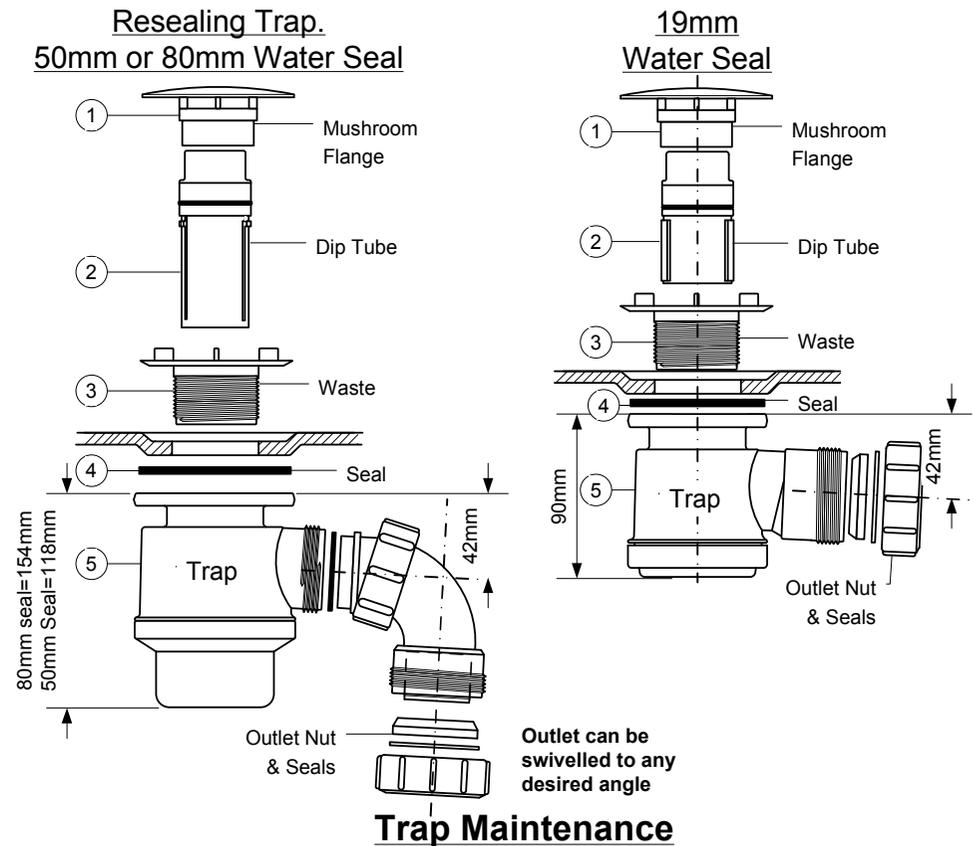

To maintain high performance discharge rate, this Trap may require cleaning as follows:-

1. Remove Mushroom Flange (1).
2. Remove Dip Tube (2) by turning anti-clockwise and pulling upwards.
3. Remove any hair and debris.
4. Flush Trap through with clean water.
5. Replace Dip Tube (2) and Mushroom Flange (1).

**Note:**

Care should be taken not to damage or distort the Dip Tube 'O' seal. Should a replacement 'O' seal be necessary, replacement seals can be purchased from a Plumber's Merchant, McAlpine Code: CARD-31

**DO NOT POUR ANY CHEMICAL DRAIN CLEANER DOWN THE TRAP**