



BOSSCONN110/82

1.

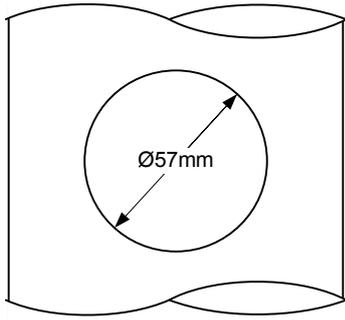


Cut 57mm hole in 110mm or 82mm pipe.

2.

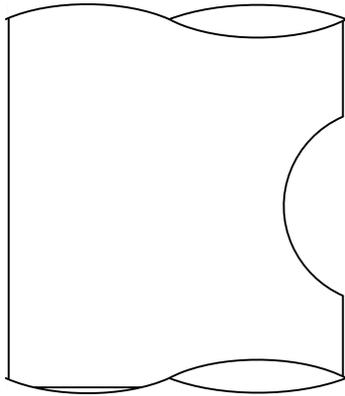


Insert Boss with seal into hole.

← TOP (5° Fall)

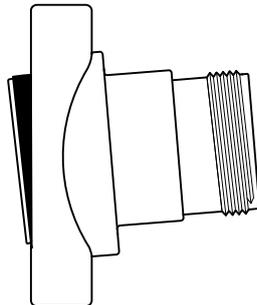


Boss with seal

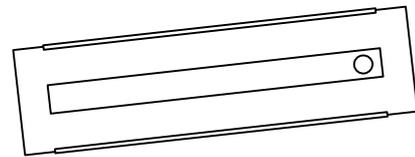

Fixing Tool


3.

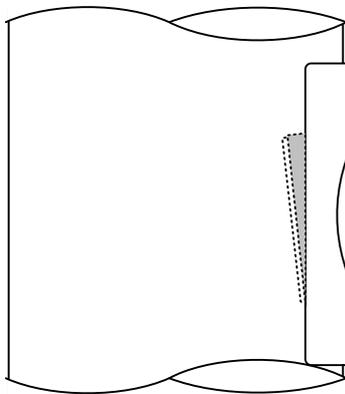


← TOP (5° Fall)

Insert Fixing Tool into Boss and turn NO MORE than three times anti-clockwise to tighten.

4.

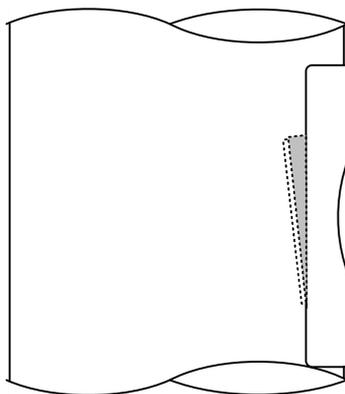

Remove Fixing Tool and fit nut and seals to pipe to complete installation.

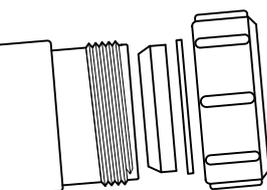

Universal Inlet